


Standard Board Fixing Clips

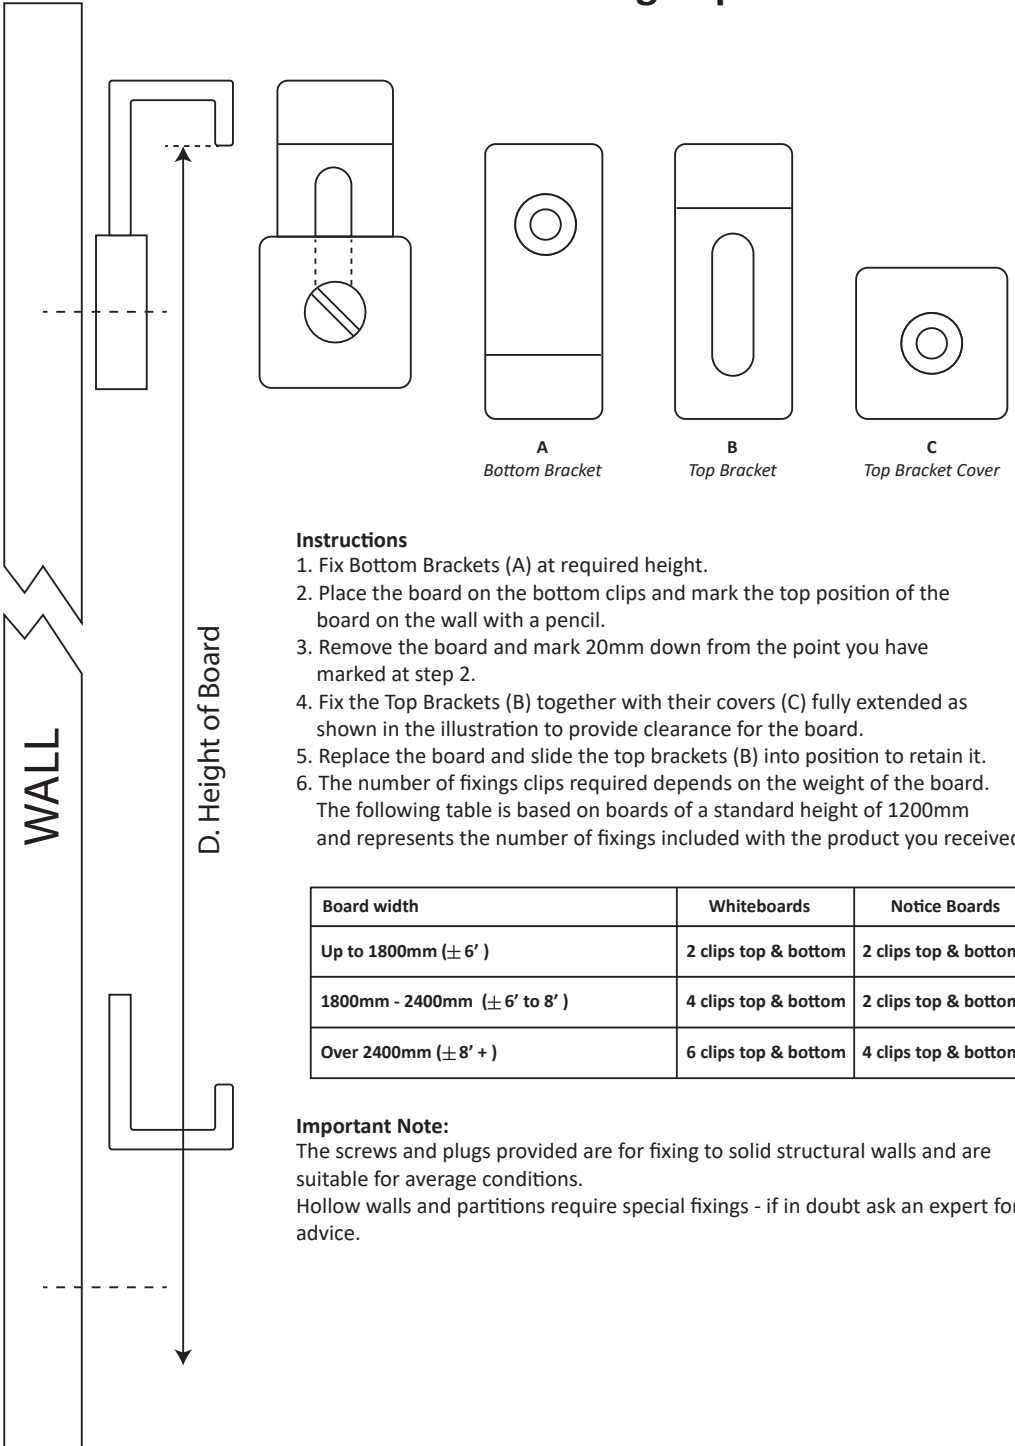

Instructions

1. Fix Bottom Brackets (A) at required height.
2. Place the board on the bottom clips and mark the top position of the board on the wall with a pencil.
3. Remove the board and mark 20mm down from the point you have marked at step 2.
4. Fix the Top Brackets (B) together with their covers (C) fully extended as shown in the illustration to provide clearance for the board.
5. Replace the board and slide the top brackets (B) into position to retain it.
6. The number of fixings clips required depends on the weight of the board. The following table is based on boards of a standard height of 1200mm and represents the number of fixings included with the product you received.

Board width	Whiteboards	Notice Boards
Up to 1800mm (± 6')	2 clips top & bottom	2 clips top & bottom
1800mm - 2400mm (± 6' to 8')	4 clips top & bottom	2 clips top & bottom
Over 2400mm (± 8' +)	6 clips top & bottom	4 clips top & bottom

Important Note:

The screws and plugs provided are for fixing to solid structural walls and are suitable for average conditions. Hollow walls and partitions require special fixings - if in doubt ask an expert for advice.